


J2-8 can be used as Forward switch function.
 When you enable forward switch, you can not use foot switch or microswitch function any more.
 J2-8 is connected to GND, J2-9 is disconnected to GND: Forward direction driving
 J2-8 is disconnected to GND, J2-9 is connected to GND: Reversing direction driving
 J2-8 is disconnected to GND, J2-9 is disconnected to GND: Neutral position
 J2-8 is connected to GND, J2-9 is connected to GND: Neutral position

See From Front Side

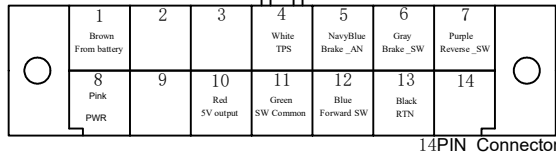

PM(24V-72V) Controller Assembly Wiring Diagram

						KELLY CONTROLS, LLC	
Mark	Subarea	Signatory	Date	02/29/2019			
Design		Stand		modification	Number	Proportion	
Assessor							V1.0
Technics		Authorize					
Sum							