FX302 Installation Instructions for the Club Car Regen2



CAUTION Before Installation:

- Place rear on jack stands (wheels off the ground)
- Use proper eye protection and tools when working with electrical equipment
- Disconnect the batteries



Installation:

- 1. Mount the control.
- **2.** Connect all motor wires (refer to supplied wiring diagram for proper connection).
- **3.** Connect the 23 pin connector to the new control.
- **4.** Disconnect the On Board Computer plug and install the adapter harness. (See diagram on page 2.)
- **5.** Plug in charger for 30 seconds.



Troubleshooting:

Perform all troubleshooting checks with rear wheels off the ground.

Cart does not operate

- Verify that all wire connections are correct and secure.
- Verify that the Tow switch is in the run position. This can be done by measuring pin 1 on the control. If switch is closed this pin should measure close to battery volts.

- Verify battery volts on pin 2 of the control.
- Verify approximately 30 volts on pin 6 of the control with the key on.
- Verify approximately battery volts on pin 11 of the control.
- Verify zero volts on pin 3 of the control with no throttle.
- Verify battery volts on pin 3 of the control at full throttle.
- Verify battery volts on pin 4 and zero volts on pin 5 of the control when the forward direction is selected.
- Verify battery volts on pin 5 and zero volts on pin 4 of the control when the reverse direction is selected.
- Verify that control is configured for the correct application (check label).
- If the vehicle has been stored for three days without charging, plug charger in for 30 seconds.

Contactor closes but no movement

- Verify proper armature and field connections (Refer to supplied wiring diagram).
- Verify approximately 3.5V to 0.5V on pin 7 of the control as the accelerator is slowly depressed.



Disclaimer:

Flight Systems Industrial Products is not responsible for personal injury or equipment damage due to misuse of the product.



1015 Harrisburg Pike Carlisle, PA 17013 Phone: (717) 254-3747 Fax: (717) 254-3777 Website: www.fsip.biz

