
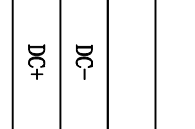


J2-8 can be used as Forward switch function.
When you enable forward switch, you can not use foot switch or microswitch function any more.
J2-8 is connected to GND, J2-9 is disconnected to GND: Forward direction driving
J2-8 is disconnected to GND, J2-9 is connected to GND: Reversing direction driving
J2-8 is disconnected to GND, J2-9 is disconnected to GND: Neutral position
J2-8 is connected to GND, J2-9 is connected to GND: Neutral position

See From Front Side

1	2	3	4	5	6	7
Brown From battery		NavyGreen Thermistor	White Throttle	NavyBlue Brake_AN	Gray Brake_SW	Purple Reverse_SW
8	9	10	11	12	13	14
Pink PWR		Red 5V output	BlackGreen SW Common	Blue FWD_SW	Black RTN	

14PIN Connector

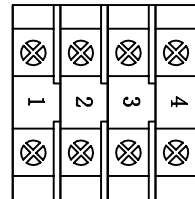

						KELLY CONTROLS, LLC	
Mark	Subarea	Signatory	Date	9/10/2018			
Design		Stand	modification	Number	Proportion		
Assessor		Technics	Authorize				
				Sum	V1.1		

KHB Assembly Wiring Diagram